

YC-Max9 All-in-one player product

specifications

Version number: V1.0

1 System characteristics

1.1 Eight-port output, 1024 pixels per channel, and the maximum load of a single unit supports 8196 pixels, which greatly meets the needs of customer projects;

1.2 The system supports automatic, timing, and holiday preset effect playback;

1.3 The controller with keys and external remote control (optional), program segment selection, overall brightness adjustment, white balance adjustment, playback speed adjustment, etc;

1.4 Support single independent use, also support multiple cascade, and support the first as the main control use.

1.5 The RS485 / DMX512 interface is reserved to support scene selection, brightness adjustment, speed adjustment, etc;

1.6 Support the switch parallel scheme: reduce the system cascade chain length to improve the stability;

-
- 1.7 Three basic color independent brightness control, make the precise adjustment of white balance more simple and effective;
 - 1.8 Support four-color lamps: energy saving and environmental protection, pure color;
 - 1.9 The Ethernet interface and UDP network protocol are used for stable transmission, with a maximum transmission distance of 100 m;
 - 1.10 The LCD display module displays the controller parameters and status in time;
 - 1.11 SD card storage (standard with 1G), the controller can support up to 32G, can be preset up to 99 program files;
 - 1.12 Built-in animation test program, convenient for customers in the debugging and application of the project;
 - 1.13 Can support different types of lamps and different protocol lamps mixed use, strong compatibility.

2 design philosophy

- 2.1 Double redundancy of system signals: double the stability;
- 2.2 Four-color design: energy-saving and environmental protection, pure color;
- 2.3 Asynchronous integrated control: online priority, no online signal automatic switch offline effect, to achieve video source backup;
- 2.4 Large-scale independent development and design of video editing, playback and wiring design software: more adaptable, more powerful language support, higher openness, used in a variety of complex applications such as special screen, multi-screen, building screen, pixel light screen at home and abroad;

2.5 Support for mainstream 32-bit and 64-bit operating systems: windows 2000, windows XP, windows 7, windows8, etc;


3 expansibility

3.1 Install all current Windows operating systems and support national languages; 3.2 The playback software has sufficient interfaces to be compatible with other international general protocols and to support customers' personalized design needs; 3.3 Support the combination with the controllers such as the multi-function converter in the YC control system to realize the special project application requirements.

Controller specifications and basic parameters

1 Controller appearance


YC-MAX9 Front view of the video player:

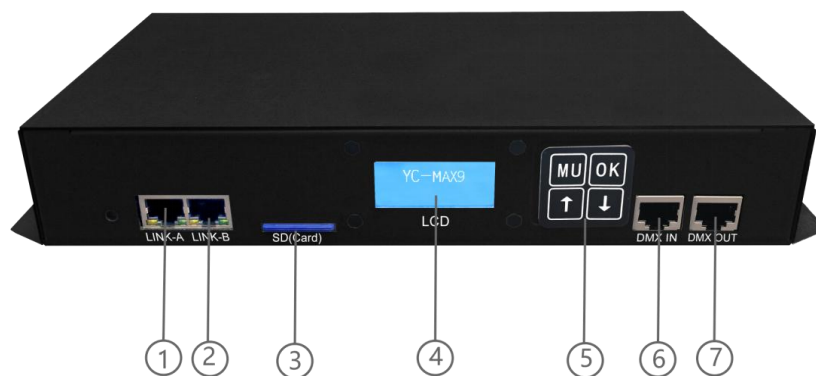

①②Adaptive network interface ③ SD card slot ④ LCD, display screen

⑤Key control panel ⑥DMX signal input ⑦DMX (console) signal input

YC-MAX9 The back picture of the video player:

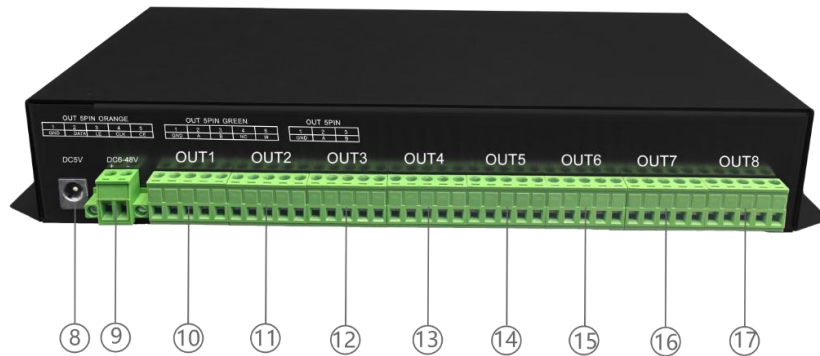


⑧DC5V input ⑨The DC 6-48 V power supply input terminal

⑩⑪⑫⑬⑭⑮⑯⑰ output port

2 Port definition

YC-MAX9The controller uses 85pin terminal interfaces to output signals

5 The Pin terminals are sorted from left to right, as illustrated in following figure:

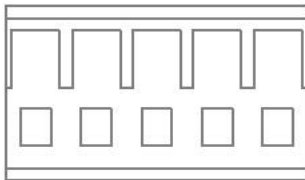

① ② ③ ④ ⑤

	①	②	③	④	⑤
TTL signal	the earth	data	Lock storage	clock	enable
	GND	DATA	LE	CLK	OE
Differential signal	the earth	data +	data-	clock +	clock -
	GND	A1	B1	A2	B2

3 Controller panel buttons



设置菜单



确认



加键




减键

4 Controller basic parameters

product name	Shadow can LED control system video broadcast
product model	YC-MAX9
rated voltage	AC 100V ~ 240V
power rating	15W
length	286mm
width	135mm
altitude	45mm
weight	1.3KG
Fixed hole between	268mm; 68 mm
Standard attached	Remote control 1 / SD card 1 / AC power cord 1
packing measurement	330*246*56mm

5 Three-view dimensions of the controller


YC-MAX9 front elevation

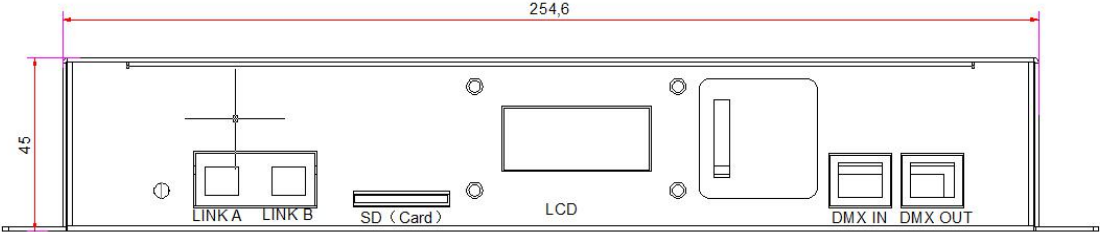

YC-MAX9 vertical view





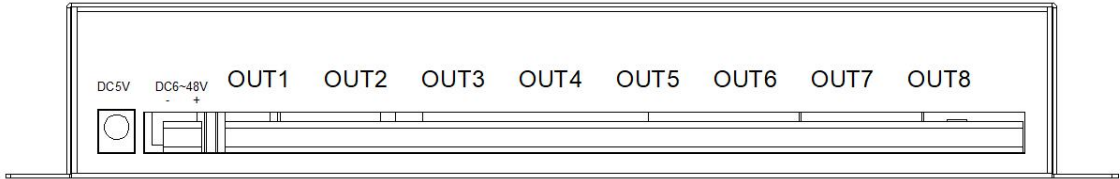









YC-MAX9 back view



pour: The dimensions in the above three views are in units of mm (mm).

Remote control key definition



-  Play the switch
-  Addition key
-  Set the menu
-  Self-test animation
-  Exit Settings
-  Determine and save
-  Time / number 0
-  Left button / previous scene
-  Right-click / go to the next scene
-  additional key
-  The key reduction
-  numbering key

Display screen display and remote control / key description

1 YC-MAX9 LCD main interface after boot

- YC-MAX9
NO CARD

← Current equipment model
← state: No SD card was detected
- YC-MAX9
NO FILE

← Current equipment model
← state: Invalid file or SD card format
- SD 01/08
LoopPlay

← Total number of programs and the current broadcast program serial number
← state: Circulating play status
- SD 01/08
TFixPlay

← Total number of programs and the current broadcast program serial number

← state: Temporary play status

SD 01/08
TimePlay

← Total number of programs and the current broadcast program serial number

← state: Play state regularly

2 YC-MAX9 Remote control setting parameters

At the YC-MAX 9 main interface, press  You can enter the menu to select the Settings interface, Press on this interface   key Different functional options can be selected, as illustrated in following figure:



—MENU:1— *PAR SET	—MENU:2— *DMXAddr	—MENU:3— *Test	—MENU:4— *SD/EMMC
----------------------	----------------------	-------------------	----------------------

【Support for this feature】 【Support for this feature】 【Support for this feature】 【This feature is not supported】

—MENU:5— *KongTai	—MENU:6— *ModeSet	—MENU:7— *Artnet	—MENU:8— *Default
----------------------	----------------------	---------------------	----------------------

【Support for this feature】 【Support for this feature】 【Support for this feature】 【Support for this feature】

Menu MENU: 1

Under this interface, press  You can enter the fragment Settings interface, In turn, according to  Make the setting menu switch,

as illustrated in following figure:

In this interface, please press + / -to adjust the playback mode;
Press OK to save and exit the settings.
Press the Cancel key to not save and exit the settings.
mode definition: 1 the Loop loop mode
2 Wait waiting mode
3 01~99 Fixed a place on a certain program

—MENU:1—
*PAR SET

← Menu serial number: 1

← Enter the parameter setting by pressing OK



In this interface, press + / -to adjust the playback frame frequency and playback speed;
Press OK to save and exit the settings.
Press the Cancel key to not save and exit the settings.
Note: Press the left / right button to switch the frame frequency and speed setting.

INDEX
=Loop

← Segment selection settings

← [Loop Mode] The default



*SPD=025
FPD=X01

← Play frame frequency

← Play speed

In this interface, please press the + / -key to adjust the date value;
Press OK to save and exit the settings.
Press the Cancel key to not save and exit the settings.
Note: Press left / right to move the date and select the cursor.

2021
--06--16

← year

← moon— sun

In this interface, please press the + / -key to adjust the time value;
Press OK to save and exit the settings.
Press the Cancel key to not save and exit the settings.
Note: Press left / right to select the cursor.

TIME
08:30:39

← time

←time —component—second

In this interface, please press the + / -key to adjust the brightness value;
Total luminance interval: 0-100%
Press OK to save and exit the settings.
Press Undo to not save and exit the settings.



In this interface, press + / -to adjust the brightness values of A, B, C and D;
A Brightness range: 0~100%;
B. Brightness interval: 0-100%;
C. Brightness interval: 0-100%;

BRIGHT ← total brightness
=100% ← Percentage of brightness



A=100% ←A, B luminance
B=100% ←Percentage of brightness



C=100% ← C, D luminance
D=100% ← Percentage of brightness



Fix ID ← ID number
001→002 ← Fixed number range






Fix ID ←ID number
Clear ←Clear the fixed ID

In this interface, please press the + / -key to adjust the ID number value;
 Press OK to save and exit the settings.
 Press the Cancel key to not save and exit the settings.
Note: Press Left / right to move the ID number and select the cursor.
The previous number refers to the number of the start controller
The following number is the ending controller number

Press OK in this interface to clear the fixed ID with one key.
 Press Undo to not clear the fixed ID and exit the settings.

Menu MENU: 2

Under this interface,press  You can enter the write-down address interface,In turn, according to   Make the setting menu switch,as illustrated in following figure:

— MENU:2 — ← Menu serial number: 2
***DMXAddr** ← Set the DMX address





DMX512AP
TD03S001

UCS512
TD03S001

← DMX chip selection.....



← Set the DMX channel with the starting




address



pour: press   Removable cursor to DMX chip selection, DMX chip channels (TD), starting DMX address (S).

From the cursor to the number of DMX chip channels (TD),in proper order  


Switch to select the corresponding DMX channel to write to;

From the cursor to the starting DMX address (S),in proper order   Switch and select the corresponding DMX channel to be written;

From the cursor to the starting DMX address (S),in proper order   Switch to select the corresponding starting DMX address to be written;After setting the DMX chip and the number of channels or starting channels,按  You can address and write.

pour: When the video player is playing normally, Long press  You can directly access to the address interface of the DMX512 driver chip , And switch to select DMX512AP / UCS512 / MR-DMX 05 / TM512 / SM16512 / UCS512C and other driver chip models, Add / subtract to set the number of channels or starting channels per unit lamp, press  You can address and write.

Menu MENU: 3

Under this interface,press  You can enter the self-built test interface,In turn, according



to Switch over to the Settings menu, as illustrated in following figure:

—MENU:3—
***Test**

← Menu serial number: 3

← Built-in self-inspection effect



01-Test3
VLIN0001

02-Test3
R 000

03-Test3
G 000

04-Test3
B 000

01 Light fixtures are tested point by point

02 Red self-inspection

03 Green self-inspection

04 Blue self-inspection

05-Test3
W 000

06-Test3
RGBW

07-Test3
COLOR

08-Test3
R 001

05 White self-inspection

06 Red, green, blue and white jump

07 Colorful gradient

08 Red gray change

09-Txst3
G 001

10-Txst3
B 001

11-Txst3
W 001

12-Txst3
A 001

09 Green gray change

10 Blue gray change

11 Change in white gray scale

12 RGBW Grayscale

13-Txst3
HLIN0001

13 Test port by port

pour: At the YC-MAX 9 main interface, press




You can enter the self-test and play


interface;

Under the TEST self-test interface, click  Number of switchable colors: 1~4 channel selection (R, RG, RGB, RGBW);

Under the TEST BIT interface,click   Switch to the manual mode;

In the HLIN port-by-port test mode,click   Switch to the manual mode;

Under the TEST BIT interface, In turn, according to  Can switch between multiple self-check modes;




Under the TEST BIT interface,In turn, according to  You can exit the self-test mode.

Menu MENU: 4

—MENU: 4—
*SD/EMMC

This mode is not supported and will be updated later

Menu MENU: 5

Under this interface,press  You can enter the self-built test interface,In turn, according to   Make the setting menu switch,as illustrated in following figure:

—MENU: 5—
*KongTai

← Menu serial number: 5

← Control platform mode



OFF
ST=001

← The console mode is closed

← Starting DMX channel (address code)



SLJF ← 4 Channel mode
ST=001 ← Starting DMX channel (address code)



SLRGBJF ← 7 Channel mode
ST=001 ← Starting DMX channel (address code)



SLRGBWJF ← 8 通道模式
ST=001 ← Starting DMX channel (address code)



WIFI ← WIFI pattern
ST=001 ← Starting DMX channel (address code)



S. .Frgb ← 11 Channel mode
DST=001

← Starting DMX channel (address code)



SLRGBWJ
+ST=001

← 6-channel mode + multi-channel program mode

← Starting DMX channel (address code)



LRGBJS
ST=001

← 7 Channel mode

← Starting DMX channel (address code)



S. WFrGb
DST=001

← 12 Channel mode

← Starting DMX Address (address code)



LS18TD
ST=001

← 18 Channel mode

← Starting DMX Address (address code)



LS20TD
ST=001

← 20 Channel mode

← Starting DMX Address (address code)

DMX512 Call mode:

“SLJF”、 “SLRGBJF”、 “SLRGBWJF”、 “SLRGBJFrgbD”、 “SLRGBWJ+”、 “LRGBJS ”、
“SLRGBWJFrgbd”、 “LS18TD”、 “LS20TD” class channel pattern.

Start channel: You can set any starting address.

Mode 1. The 4-channel mode "SLJF"

thoroughfare	content	DMX price	Control content description
1	speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
2	brightness control	000-255	Total dimming
3	Program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
4	stroboflash	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash

Mode 2. 7 Channel mode "SLRGBJF"

thoroughfare	content	DMX price	Control content description
1	speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
2	brightness control	000-255	Total dimming
3	Color adjustment	000-255	Red color (R)
4	Color adjustment	000-255	Green color (G)
5	Color adjustment	000-255	Blue color (B)
6	Program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
7	strobobflash	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash

Mode 3.

8-Channel mode "SLRGBWJF"

thoroughfare	content	DMX price	Control content description
1	speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
2	brightness control	000-255	Total dimming
3	Color adjustment	000-255	Red color (R)
4	Color adjustment	000-255	Green color (G)
5	Color adjustment	000-255	Blue color (B)
6	Color adjustment	000-255	White color (W)

Mode 4.

7	Program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
8	strobeflash	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash

11.

Channel mode "SLRGBJFrgbD"

thoroughfare	content	DMX price	Control content description
1	speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
2	brightness control	000-255	Total dimming
3	Color adjustment	000-255	Red color (R)
4	Color adjustment	000-255	Green color (G)
5	Color adjustment	000-255	Blue color (B)
6	Program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
7	strobeflash	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash
8	The background adjustment	000-255	Red color (R)
9	The background	000-255	Green color (G)

	adjustment		
10	The background adjustment	000-255	Blue color (B)
11	Reverse broadcast	0-127	forward direction
		128-255	opposite direction

Mode 5. The 6-channel + multi-channel program mode is "SLRGBWJ +"

thoroughfare	content	DMX price	Control content description
1	speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
2	brightness control	000-255	Total dimming
3	Color adjustment	000-255	Red color (R)
4	Color adjustment	000-255	Green color (G)
5	Color adjustment	000-255	Blue color (B)
6	Color adjustment	000-255	White color (W)
7	Program scene	0-255	scenario one
8		0-255	Scene 2
9		0-255	Scene 3
10		0-255	Scene 4
11		0-255	Scene 5
12		0-255	Scene 6
13		0-255	Scene 7
.....	

Mode 6. 6-channel mode "LRGBJS"

thoroughfare	content	DMX price	Control content description
1	brightness control	000-255	Total dimming
2	Color adjustment	000-255	Red color (R)
3	Color adjustment	000-255	Green color (G)
4	Color adjustment	000-255	Blue color (B)
5	Program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3

		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
6	stroboflash	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash

Mode 7. The 12-channel mode "SLRGBWJFrgbD"

thoroughfare	content	DMX price	Control content description
1	speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
2	brightness control	000-255	Total dimming
3	Color adjustment	000-255	Red color (R)
4	Color adjustment	000-255	Green color (G)
5	Color adjustment	000-255	Blue color (B)
6	Color adjustment	000-255	White color (W)
7	Program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
8	stroboflash	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash
9	The background adjustment	000-255	Red color (R)
10	The	000-255	Green color (G)

	background adjustment		
11	The background adjustment	000-255	Blue color (B)
12	Reverse broadcast	0-127	forward direction
		128-255	opposite direction

Mode 8. 18. Channel mode "LS18TD"

thoroughfare	content	DMX price	Control content description
1	Total height regulation	000-255	Total dimming
2	The first program is a speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
3	The first program is red adjustment	000-255	Red color (R)
4	The first program is green adjustment	000-255	Green color (G)
5	The first program is blue adjustment	000-255	Blue color (B)
6	The first show is the program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
7	The first program was stroboscopic	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash
8	top line Backplay (animation reverse)	0-127	Animation positive
		128-255	Animation reverse
9	The second program speed adjustment	000-128	Speed varies from slow to fast

		129-255	Speed varies from fast to slow
10	The second program is the red adjustment	000-255	Red color (R)
11	The second program is the green adjustment	000-255	Green color (G)
12	The second program is the blue adjustment	000-255	Blue color (B)
13	The second program program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
14	The second program is stroboscopic	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash
15	The second program Backplay (animation reverse)	0-127	Animation positive
		128-255	Animation reverse
16	Background background adjustment	0-255	Red color (R))
17	Background background adjustment	0-255	Green color (G)
18	Background background adjustment	0-255	Blue color (B)




Mode of 9. 20-Channel mode "LS20TD"


thoroughfare	content	DMX price	Control content description
1	Total height regulation	000-255	Total dimming
2	The first program is a speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies

			from fast to slow
3	The first program is red adjustment	000-255	Red color (R)
4	The first program is the green adjustment	000-255	Green color (G)
5	The first program is blue adjustment	000-255	Blue color (B)
6	The first program is white adjustment	000-255	White color (W)
7	The first show is the program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4
		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
.....	and so on		
8	The first program was stroboscopic	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash
9	top line Reverse broadcast(Animation reverse)	0-127	Animation positive
		128-255	Animation reverse
10	The second program speed adjustment	000-128	Speed varies from slow to fast
		129-255	Speed varies from fast to slow
11	The second program speed adjustment	000-255	Red color (R)
12	The second program is the green adjustment	000-255	Green color (G)
13	The second program is the blue adjustment	000-255	Blue color (B)
14	The second program is the white adjustment	000-255	White color (W)
15	The second program program scene	000-003	scenario one
		004-007	Scene 2
		008-011	Scene 3
		012-015	Scene 4




		016-019	Scene 5
		020-023	Scene 6
		024-027	Scene 7
		and so on
16	The second program is stroboscopic	000-063	1 File flash
		064-127	2 File flash
		128-191	3 File flash
		192-255	4 File flash
17	The second program Reverse broadcast(Animation reverse)	0-127	Animation positive
		128-255	Animation reverse
18	Background background adjustment	0-255	Red color (R)
19	Background background adjustment	0-255	Green color (G)
20	Background background adjustment	0-255	Blue color (B)


MENU:6

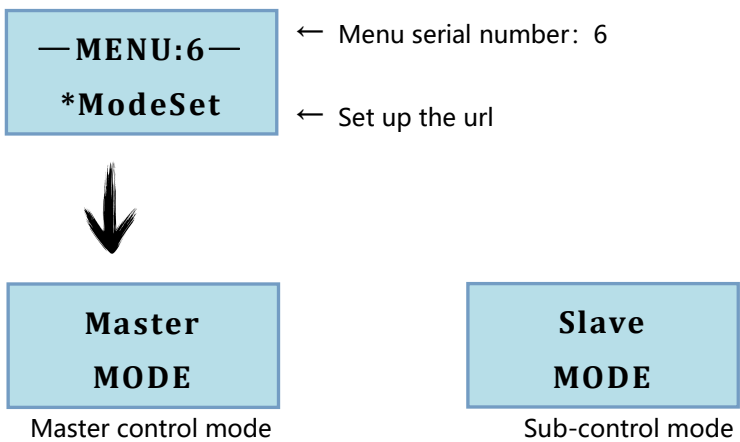Under this interface, Press  You can enter the self-built test interface, In turn, according to   Switch over to the Settings menu, as illustrated in following figure:





MENU:7

Under this interface, Press  You can enter the self-built test interface, In turn, according to   Switch over to the Settings menu , as illustrated in following figure:

 ← Menu serial number: 7
*Aetnet ← Set up the url

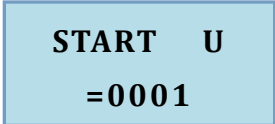


 ← origin Universe
=0001 ← 0001

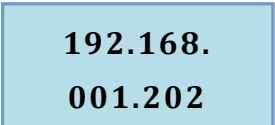 ← IP address
192.168.
001.202

You can manually match the starting U and IP address by pressing MENU and upper and down keys , Support for 192.168.x.x network segment and support for 2.x.x.x network segment

MENU:8

Under this interface, Press  The factory default settings can be restored, as illustrated in following figure:

— MENU:8 —
*Default

← Menu serial number: 8

← Restore the factory default settings

Press OK to restore the default Settings, The default setting is the master control machine mode

3 Controller key setting parameters

3.1 Menu MENU: under the 1 interface, Press **MU** You can enter the fragment Settings interface, In turn, according to **OK** Switch over to the Settings menu, as following picture shows:

INDEX
=Loop

← catalogue

← Loop Playback (The fragment number is selected when the number is displayed)

Press on this interface **↑ ↓** Adjust the program serial number and the cycle mode, Press **OK** You can save the exit settings.

3.2 Press again **MU** You can enter the playback speed selection interface, as following picture shows:

*SPD=025
FPD=x01


← Play frame frequency




← Play speed


Press on this interface **↑ ↓** Set the playback speed, Press **OK** You can save the exit settings.



3.3 Press again **MU** You can enter the lighting brightness setting interface, As shown in

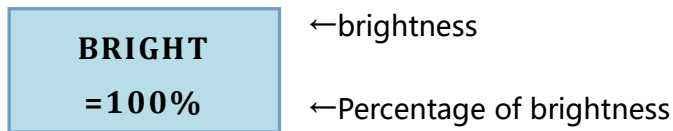


the figure below:




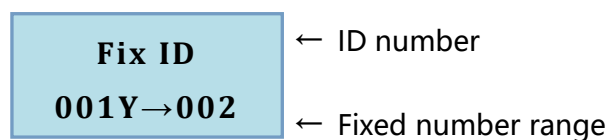
Press on this interface   Set the brightness, Press  You can save the exit settings.

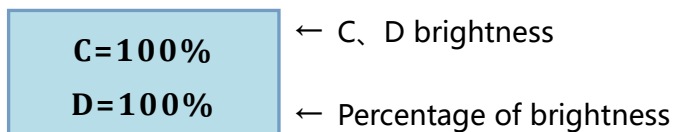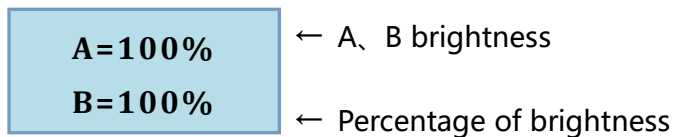
3.4 Press again  You can enter the setting interface of brightness adjustment of channels A, B, C and D, As shown in the figure below:




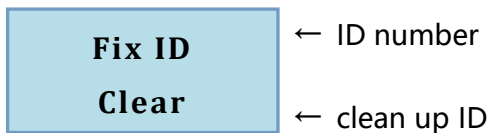
Press on this interface   Set the brightness, Press  You can save the exit settings.


3.5 Press again  Can modify the separate control and fixed ID number interface, as illustrated in following figure:



Press on this interface  All the separate control ID numbers connected to the main control can be fixed.





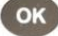

3.6 Press again  Can clear the control fixed ID number interface, as illustrated in following figure:




Press on this interface  Clear all separate control ID numbers connected to the main control.

4 About the WAIT play mode

The YC-MAX 9 offline player enters a multi-segment loop or a single segment. But require MR-3F12 offline player to play no clips, Use the remote control to select the play clips. This playback mode is the WAIT mode.


At the YC-MAX 9 main interface, Press  You can enter the menu to select the Settings interface, Press on this interface   Key can select different function options; Menu MENU: under the 1 interface, Press  That is, into the fragment setting, In turn, according to   Switch over to the Settings menu, as illustrated in following figure:

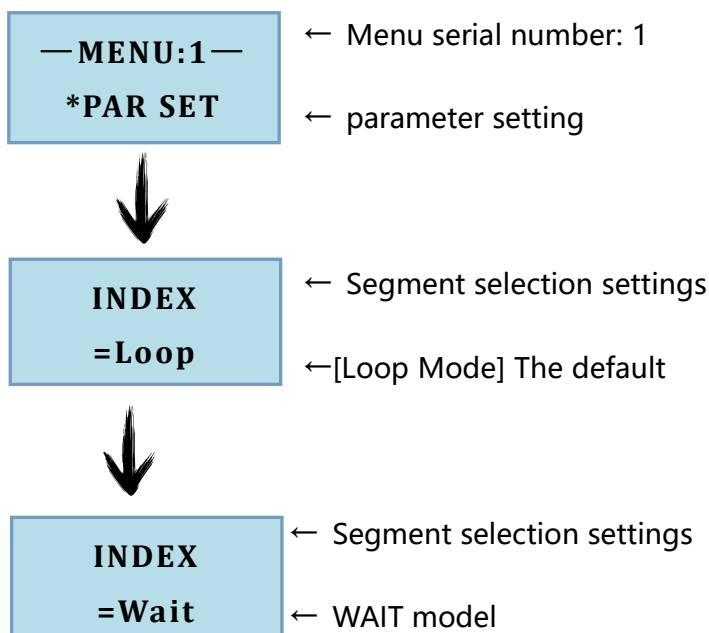





Press at this interface  You can save the exit settings.

5 Remote control operation during playback


5.1 Turn off the main control playback

Press on the YC-MAX 9 playback  Key can switch the master play. The PLAY OFF display appears on the LCD display, The lamps and lanterns become black.

5.2 Temporary adjustment of the program clips

When a certain segment is played, You can press the button   Or remote control   Number keys to adjust the played clip.

5.3 View the current time of the master


Press on the YC-MAX 9 master playback interface  The set current master time can be displayed on the LCD display.

Controller installation application

1 Control platform mode (Connect to the MA light console)


YC-MAX9 ArtNet The device is connected to the network port of the MA light console ,

As shown in the figure below:

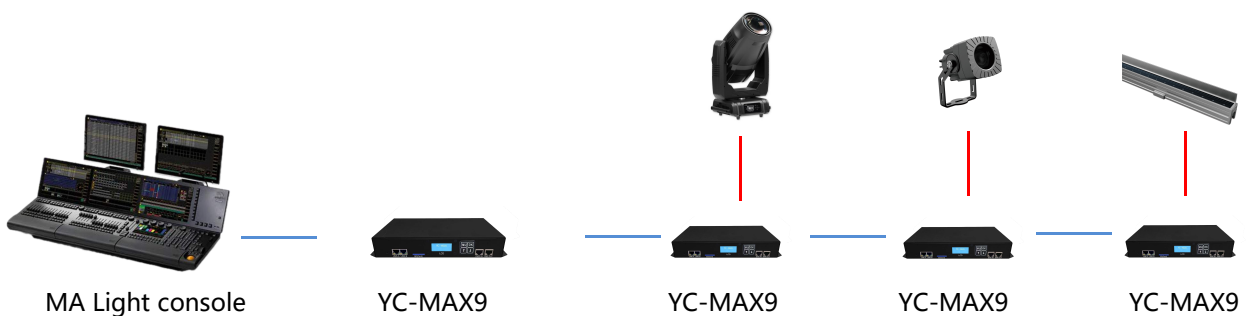


2 Computer mode (Connect with the computer)

YC-MAX9 ArtNet The device is connected to the computer network port (pre-installed with ArtNet protocol software), As shown in the figure below:

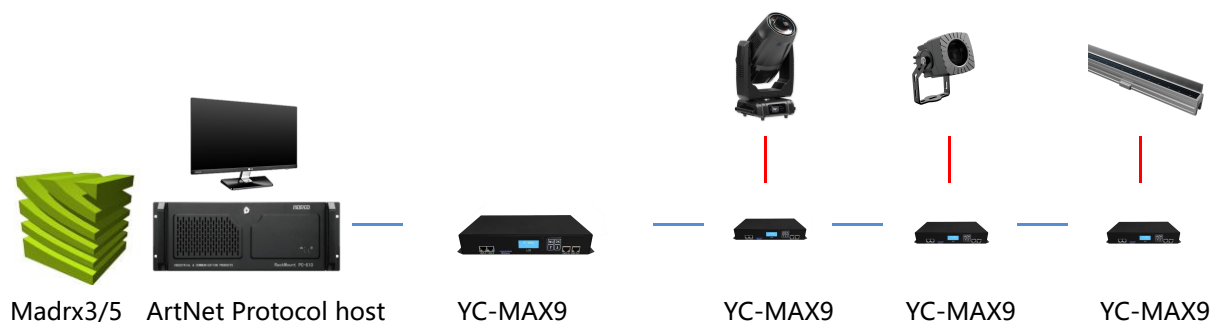

3 on-line mode (Connect to the upper computer)

The YC-MAX9 controller is connected to the Ethernet port of the computer, As shown in the figure below:

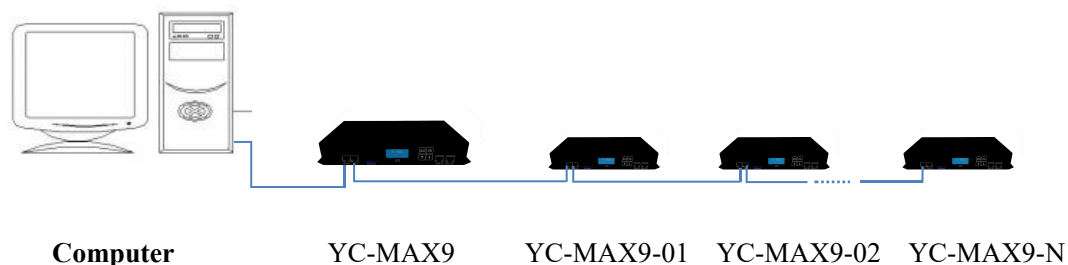

4 Engineering case illustration and schematic diagram

Take the dot array screen of 96 points and 18 points composed of DMX512 point light source as an example, The YC-A18D controller was used, as shown in the figure: 96 Points wide, At 18 o'clock, The wiring is arranged in a vertical, S-shaped manner, Each output port of the controller controls 3 columns of point light sources for a total of 32 DMX512 joggle. The following figure is an example:

568A: Green white Green Orange white Blue Blue and white Orange

Brown white Brown

The controller cascades with the controller network cable, It is recommended to use the [cross] line order: Is 568B at one end and 568A at the other end.

The switch is cascading with the controller network cable, It is recommended to use the [cross] line order: Is 568B at one end and 568A at the other end.

Any of the above equipment and computer cascade, It is recommended to adopt the [straight-through] line sequence: That is, 568B or 568A.

concentrate on: Follow the requirements, Do not define your own network line order.

3 YC-MAX9 Video player SD card application points

A SD memory card is used on the YC-MAX 9 video player, The "FAT 32" file system should be formatted before storing the corresponding offline files.

4 Application points of the controller grounding

The YC-MAX 9 video player uses a metal case, The rated power supply voltage is AC100V-240V, Therefore, it is necessary to ensure the effective grounding of the controller equipment and the equipment metal outer box.

5 Warning reminder

Please note the dust and water resistance

Please avoid direct sunlight for a long time

Do not approach the heat and fire sources

Do not place it in an explosive gas environment

Keep the product in a stable position to prevent product damage or personal injury

caused by falling

Please keep the packing boxes and packaging materials, which can be used when storing and transporting the products

matters needing attention


1 Super five types of twisted pair application points

568B: Orange white Orange Green white Blue Blue and white Green

Brown white Brown

568A: Green white Green Orange white Blue Blue and white Orange

Brown white Brown

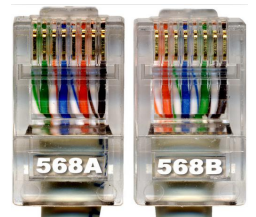

The controller and offline main controller and switch use cross network cable, Is 568B at one end and 568A at the other end. Any of the above equipment and computer network cable with direct line, That is, 568B or 568A, Do not .

2 Wire material and connection method of the lamps to the controller

1、 If the distance between the controller output port and the lamp is too far , It is recommended to use 485 special line or more than super class 5 shielded network cable connection, The best method is: Orange—A; Orange white-B; Other GND (ground) can be connected.

2、 A terminal resistance of 120R is added to the end of each channel signal between A and

B.

3、 Do not use two intertwined wires to connect the signal simultaneously, Such as orange and orange white simultaneously to A or B.

3 Application points of the controller grounding

The **YC-MAX9** controller uses a metal housing , The rated power supply voltage is AC100V-240V , Therefore, it is necessary to ensure the effective grounding of the controller equipment and the equipment metal outer box.

Also because of the controller signal output port has an exposed metal contact surface, Therefore in accordance with the safety regulations and requirements, To ensure the safe application of the operators, The signal output port GND signal must be effectively grounded.